
A NEW KIND OF PORTABLE TYPEWRITER WITH PERSONALIZED TOUCH CONTROL

R()YAI HERICAGE De Luxe

ROYAL PRESENTS THE HERITAGE De Luxe

a new kind of typewriter... with personalized touch control

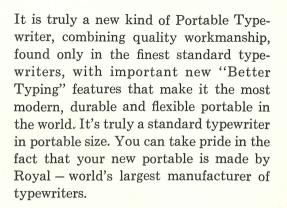

Countless precision engineering achievements are built into your Royal Portable — all designed for better, easier typing. Royal's accelerated type bars use the momentum of the keys to lift the ribbon and move the carriage, insuring greater typing ease and speed. No extra physical effort is required on your Royal.

Exclusive "Roller Trip Escapement" is the specially designed Royal roller bearing carriage trip that minimizes vibration and friction, giving you smooth, quiet carriage movement and years of trouble-free life.

These plus countless other engineering achievements assure you the most modern, convenient and rugged portable in the world. The Royal is designed for you.

you'll get more out of your New Royal Heritage De Luxe if you read this booklet carefully!

This book can help you learn all about your new Royal Heritage DeLuxe and how to use the many special features which will give you years of "better typing" with America's finest portable.

when removing your new Heritage DeLuxe from its case

The white plastic packing cushions inside the case assure greater protection for your new Royal Heritage DeLuxe during shipment. Simply lift them out of the case and you are ready to remove the machine. If you wish you may save the plastic packing pieces and use them in the future when traveling. Just release the two base clamps and lift the machine outward from the case.

before you begin to type make sure you . . .

- 1. Remove the shipping wire retaining clip by pulling out the red tag. It is located on the left side of the machine above the carriage lock.
- 2. Check that the Automatic Carriage Lock is released! See information on Automatic Carriage Lock.
- 3. Be sure right and left Magic Margins are set properly! See instructions for Magic Margin.

Your Royal Heritage DeLuxe has been carefully inspected and tested by speed typists before it left the factory. This "in use" testing gives you added assurance that your new portable is in perfect condition.

pewriter From Case.....


Removing Typewriter From Case
Inserting And Adjusting Paper 5
Adjusting Personalized Touch Control 6
Setting Margins 7
Setting Columns (Tabulation) 8
"Let's Begin To Type" 9
Using Typing Scales
Line and Carriage Spacing11
Care of Your Portable and Its Case12
Ribbon Care and Changing 13
Touch Typing Chart14
Royal Service Centers
Service Information
Guide To Royal Features



You are now ready to begin typing on your Royal Heritage De Luxe, the most preferred portable in the world.

ROYAL DESIGNS FOR MODERN CONVENIENCE

LET'S GET ACQUAINTED WITH YOUR NEW ROYAL HERITAGE DE LUXE

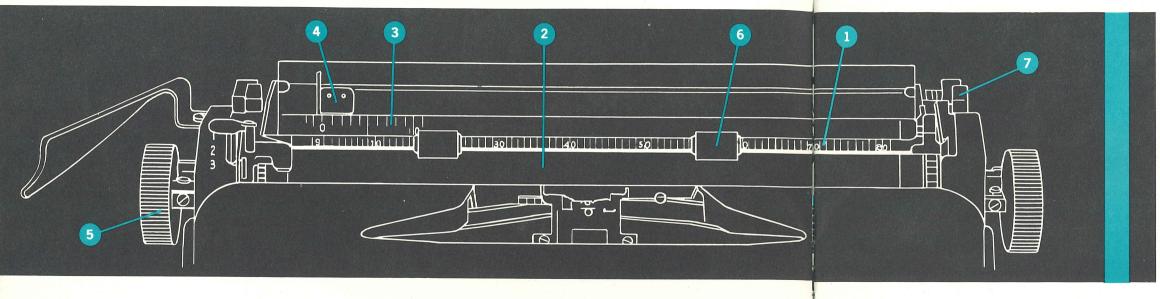

ADJUSTING AND REMOVING PAPER THE EASY WAY

- **INSERTING PAPER IS EASY AND FAST**
- A Simply lift the paper bail (1) and place paper between Cylinder (2) and Paper Table (3). Be sure that left edge of paper is lined up with the Paper Guide (4) - it acts as a straight edge and assures perfect alignment of paper at all times. Paper always stays straight in a Royal.
- **B** Turn either Cylinder knob (5) until paper feeds around the cylinder. Then lower the paper bail. The rollers (6) on the Paper bail should be spaced to divide the paper in thirds. Flip back the Paper bail with the right thumb.

If it is necessary to adjust the paper after it has been inserted into the machine, lift the Paper bail and pull the Paper Release Lever (7) forward. Adjust the paper, then lower the Paper bail and push back the Paper Release Lever. Remove paper by pulling these same two levers forward, or you may roll it out by turning either Cylinder Knob.




PERSONALIZED TOUCH CONTROL®

This exclusive feature, made famous on Royal Office Typewriters, adjusts sensitivity of the keys to your personal touch. Move the Touch Control Lever toward the high numbers and the keys automatically adjust themselves for a firm or heavy touch. If you have a light touch move the lever to the low numbers. Only Royal assures perfect touch response, because only Royal has a separate spring for each key.

JUST LIKE AN OFFICE TYPEWRITER

The Keyboard and controls on your Royal are exactly like a standard office typewriter...designed for natural ease in typing. Specially designed keys are Finger-Flow in shape. There's no obstructing semi-circle in front of the key to brush fingers or cause untidy work. Letters are inlaid right through the keys and cannot rub off; they stay clean, too, because they are flush with key surface.

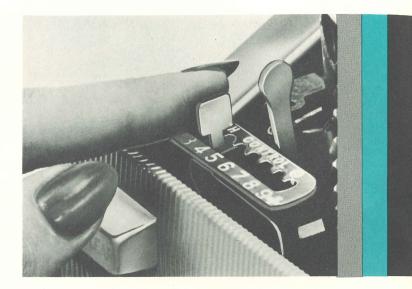

EXCLUSIVE

MAGIC MARGIN®

SETS RIGHT AND LEFT MARGINS AUTOMATICALLY



Magic Margin—as simple as flicking on a light switch—merely touch the Red Magic Margin buttons and your margins are set instantly, automatically and accurately. When setting the left margin merely hold in the left carriage release lever and press the left Magic Margin button—then move carriage to where you desire the writing line to begin and release the left Magic Margin button and the carriage release lever. Your left margin is set.

To set the right margin, hold in the right carriage release lever and right Magic Margin button and move the carriage to where you want the writing line to end. Release the right Magic Margin button and carriage release lever and your right margin is set. To change margins, simply repeat the process described above—setting margins couldn't be easier.

SET UP COLUMNS AT THE TOUCH OF A BUTTON

MAGIC COLUMN SET



Royal's Magic Column Set is a quick, easy and efficient method of setting up columns. Simply position the carriage so that the printing point is where you want to set your column. Then touch the Magic Column Set button—you may set up as many columns as needed by merely repeating this action.

To move automatically from one column or indentation to the next, depress the tab key until the carriage stops. An individual column may be cleared by tabulating to it and depressing the Clear button. All columns may be cleared automatically by pressing in on the Clear button and depressing the tab key.



LET'S BEGIN TO TYPE

At the back of this book is a special Touch Typing Chart showing the correct finger positions that will help you "Touch Type" the easy way. Just center your fingers on the home keys and touch the correct letter keys with the proper fingers. To space between words merely touch the speed space bar with either thumb. To type capitals or upper case characters press either Shift Key at the extreme ends of the lowest bank of letter keys, holding it down while you use the letter key.

To type capitals or upper case characters in sequence press the Shift Lock Key just above the left Shift Key, which holds the segment in the upper case until you depress either shift key.

WHAT DOES THE WARNING BELL MEAN?

When you approach the right margin, the warning bell will ring. After you have typed several more characters, the line lock will take effect, locking the type bars to prevent you from typing one character over another. Move to the next line as soon as possible after warning bell rings.

MARGIN RELEASE

To type past either left or right margins, move the carriage to the margin and depress the Margin Release Key.

NEATER TYPING

IS ASSURED WITH ADVANCED ROYAL FEATURES

SPECIAL TYPING GUIDES COVER ANY TYPING NEED

1 THE CYLINDER SCALE

The cylinder scale spans the cylinder. Use it to determine margins, to set tab stops and to position the carriage. These points are located by the use of 4 THE PAPER BAIL SCALE the white indicator below the printing point.

CARD AND WRITING LINE SCALE

This scale is used to align characters with work already on the page or card. The edge of the scale denotes the base of the writing line. To write on cards or envelopes, raise the Disappearing Card Finger at the right end of this scale.


3 THE PAPER GUIDE SCALE

Paper Guide Scale indicates the location in which the paper is inserted into the portable.

This scale is used to determine the center of the page, to center headings and to locate points on the paper.

To find the center of a page, add the left and right scale readings of the paper and divide by two. For instance, if the left edge of the paper is set at 0, and the reading at the right edge is 84, the center is 42. Move the carriage until the figure 42 on the cylinder scale is located at the printing point, and your page is centered.

To Center a Heading, locate the center of the page as above. Then press the Back Space Key once for each two letters and spaces in the heading.

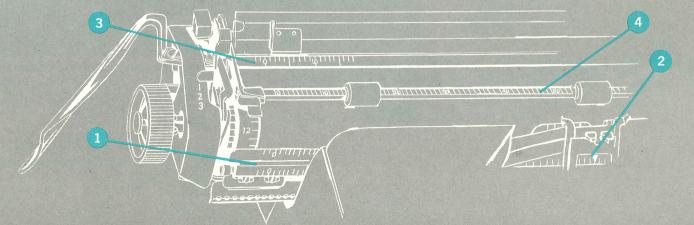

1 SINGLE, DOUBLE OR TRIPLE SPACING.

Just set the Line Space Selector at the desired number.

2 MOVING FROM LINE TO LINE.

Line spacing and carriage return are accomplished simultaneously with a single sweep of the left hand against the streamlined Line Space Lever. Royal's specially designed touch lever assures greater speed, increased typing comfort and ease.


3 WANT TO TYPE BETWEEN THE LINES?

When you wish to alter your writing line temporarily in order to type between the lines as when typing a recipe, chemical or mathematical formulas-H₂O, A² + B², or 350°-move the Line Finder forward and rotate the cylinder to the desired position. To return to the exact original line position, simply relock the Line Finder and the cylinder will automatically adjust itself to the original position.

4 VARIABLE LINE SPACER.

To make a permanent change in line spacing, press in the Variable Line Spacer button while rotating the Cylinder Knob to the desired position, then release the button. The spacing is then permanently changed to the new set-up.

MOVE FROM LINE TO LINE EFFORTLESSLY WITH YOUR NEW ROYAL

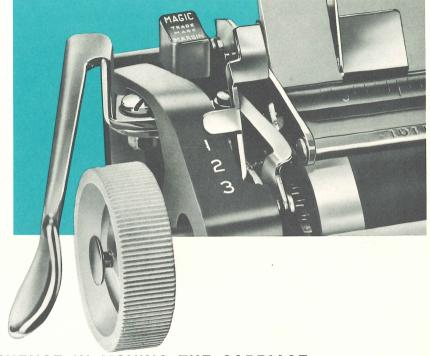

NEW SPEED AND CONVENIENCE IN MOVING THE CARRIAGE

The carriage may be released and moved in either direction by holding in left or right Carriage Release Lever.

back spacing

The carriage may be moved back one space at a time by touching Back Space Key.

speed spacer

Royals new full-width space bar is faster and easier to operate. Carriage can be moved ahead one space at a time by touching the Speed Spacer.

The carriage may be moved to preset positions by touching Tab Key (see separate section on Royal's Magic Column Set).

IT'S EASY TO TAKE CARE OF YOUR ROYAL PORTABLE

From time to time, dust the outside and accessible parts with a brush or dry cloth.

Clean the type regularly with a recommended type cleaner and a short bristle.

Do not erase directly over the printing point. Move the carriage to either side, then erase.

Wipe the carriage rails and other nickel parts occasionally with a cloth moistened with a very little oil.

Keep your Portable covered when not in use.

Replace ribbon at regular intervals. This will assure clean, sharp typing at all times

Always center carriage lock before closing the carrying case cover.

If your Royal Portable requires mechanical attention especially cleaning and oiling, take it to the nearest Royal McBee branch office or authorized Royal Portable service dealer.

NEW HIGH STYLE ROYAL PORTABLE CASE

Your Royal Portable comes in a highly-styled, modern carrying case that is light-weight and durable.

If you like, use your Royal Portable in its case. Simply open the cover and you are ready to type. Or, remove the top of the case by holding the Hinge Lock toward you and slide off the top to the right.


For the quietest typing of all, remove the Portable from the case. To do this release the two base clamps and lift the Portable outward from the base of the case. To replace it in the case, angle the back of the Portable onto the base catch, then set the front of the machine on the feet pins and re-engage the clamps.

WHEN CARRYING YOUR ROYAL PORTABLE

Automatic Carriage Lock This feature enables you to center and lock the carriage giving added safety when carrying your Royal Portable.

To engage the Carriage locking device, move the carriage to the extreme right, depress the Carriage Lock Lever move the carriage back to the left until the Carriage Centering lock is engaged. This will center your carriage and lock it into position.

To disengage the Carriage Lock, raise the Carriage Centering Lever until the carriage is released.

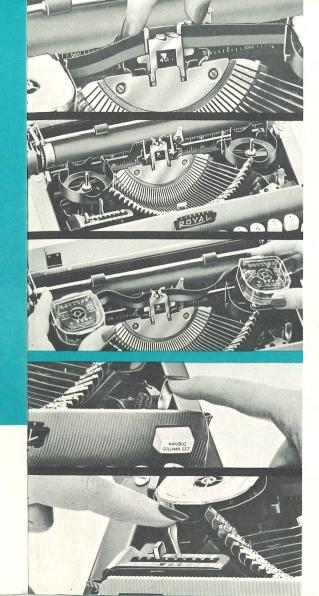

PROPER RIBBON CARE MEANS CLEAN, SHARP TYPING

CHANGING RIBBONS THE EASY ROYAL WAY IS FUN

EXCLUSIVE TWIN-PAK CLEAN 'N EASY RIBBON CHANGER

- (1) Simply press the Royal Name Plate to open the top. (2) Pinch two prongs on ribbon together. (3) Lift the old carrier TWIN-PAK cartridges out of ribbon cups and discard.
- (1) With the ribbon carrier prongs in the open position, hold a new TWIN-PAK ribbon cartridge in each hand (rounded edges nearest you) so you can read the name "TWIN-PAK" on the top of the cartridge. (2) Then slip the ribbon behind the open prongs and in front of the upright posts. (3) Insert ribbon in guide slots. (4) Drop each cartridge into the ribbon cups.

Close top plate and you are ready to type. The first key that you strike will automatically close the (1) ribbon carrier, locking the ribbon securely in place

RIBBON COLOR SELECTOR

FINGERTIP CHOICE OF BLACK OR RED RIBBON



The Ribbon Color Change Lever permits you to use either the red or black half of the ribbon. To type using the lower, or red half of a two-color ribbon, move the lever to the red dot. To use the upper, or black, half of the ribbon, move the lever to the black dot. For stencil writing, move the lever to the white dot.


RIBBON REVERSE. The ribbon reverses itself automatically when the end is reached. However, it may be reversed at any time by moving the Ribbon Reverse Lever, located directly behind touch control. Simply move lever to its opposite position.

When your ribbon needs replacing, see your Royal Portable dealer. He can supply you with exclusive TWIN-PAK ribbon cartridges.

SERIAL NUMBER


Record your Royal Portable serial number on your guarantee card. You will find it by moving the carriage to the extreme

TOUCH TYPING CHART

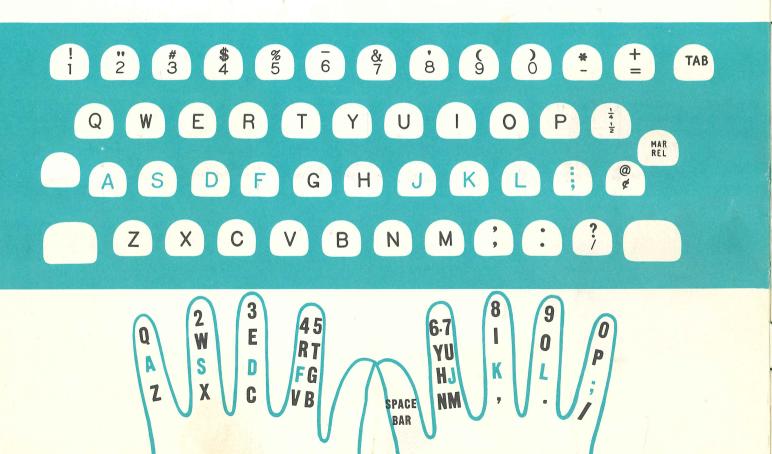

ALL THESE FEATURES PLUS MANY, MANY MORE

combine to make Royal the outstanding portable typewriter in the world

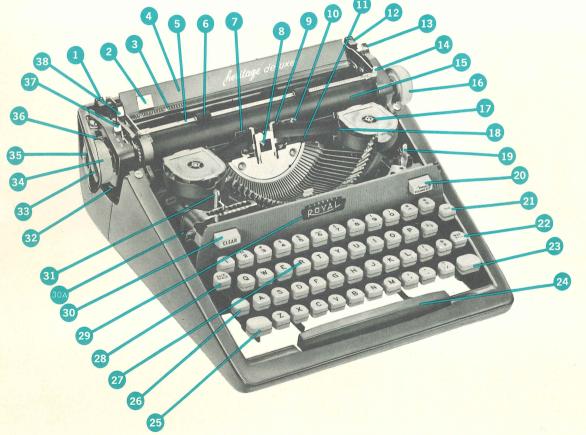

- 1. Magic Margin Left
- 2. Paper Guide
- 3. Paper Guide Scale
- 4. Paper Table
- 5. Paper Bail Scale
- 6. Paper Bail Rollers
- 7. Writing Line Scale
- 8. Carriage Position Indicator
- 9. Ribbon Vibrator
- 10. Disappearing Card Finger
- 11. Cylinder Scale
- 12. Magic Margin Right
- 13. Paper Release Lever
- 14. Paper Bail Lever
- 15. Cylinder
- 16. Cylinder Knob Right
- 17. Twin-Pak Ribbon
- 18. Ribbon Guide Slot
- 19. Ribbon Color Selector
- 20. Magic Column Set
- 21. Tab Key
- 22. Margin Release Key
- 23. Right Shift Key
- 24. Speed Spacer
- 25. Left Shift Key
- 26. Shift Lock Key
- 27. Fully Standard Keyboard
- 28. Back Space Key
- 29. Push Button Top
- 30. Column Clear
- 30A. Personalized Touch Control
- 31. Ribbon Reverse Lever
- 32. Carriage Lock and Centering Device
- 33. Line Space Lever
- 34. Left Cylinder Knob
- 35. Variable Spacer
- 36. Left Carriage Release
- 37. Line Space Selector
- 38. Line Finder

Certificate of Guarantee

ROYAL PORTABLE TYPEWRITER

	Inis guarantees to
,	that Royal Portable Typewriter, Serial Numberis guaranteed for ninety days from date of original purchase as new and if presented within ninety days with this guarantee at any branch of the Royal McBee Corporation, or to the undersigned authorized dealer, any part or parts which may become unserviceable through ordinary wear and not through accident, misuse or neglect will be replaced and any necessary adjustments made without charge. This guarantee does not include cylinder, ribbons, or cleaning.
	This guarantee shall be honored only if said Typewriter
	is purchased from a retailer who obtained said Type-

writer directly from Royal McBee Corporation.

portable was purchased.

This guarantee must be signed by the retailer from whom

ROYAL SERVICE CENTERS

Alabama Birmingham Montgomery

Arkansas Little Rock

California Burbank Culver City Long Beach Los Angeles Sacramento

Colorado Denver

Connecticut Bridgeport New Haven

Delaware Wilmington

Florida Jacksonville Miami Tampa

Georgia Atlanta

Rockford

Indiana

Fort Wayne Indianapolis South Bend

Cedar Rapids Des Moines

San Diego San Francisco

Springfield

Evansville

Iowa

Kansas Wichita Kentucky Louisville

> Louisiana New Orleans

Maine Portland Maryland

Baltimore

Massachusetts Boston Springfield Worcester

Michigan Detroit Flint Grand Rapids

Minnesota Minneapolis St. Paul

Missouri Kansas City St. Louis

Nebraska Omaha

> New Jersey Newark

New Mexico Albuquerque

New York Albany Brooklyn Hempstead New York Rochester White Plains

North Carolina Charlotte

Raleigh Akron

Cincinnati Cleveland Columbus Dayton Youngstown

Oklahoma Oklahoma City

Oregon Portland

Pennsylvania Harrisburg

Rhode Island Providence

> South Carolina Columbia

Tennessee Chattanooga Knoxville Memphis Nashville

Texas Dallas Fort Worth Houston San Antonio

Salt Lake City

Virginia Norfolk Richmond

Washington Spokane Tacoma

West Virginia Charleston

Wisconsin Madison Milwaukee

Washington

91 District Offices at any time within 90 days after you purchased the machine. A complete list of ROYAL SERVICE CENTERS is shown on the preceding page along with the Certificate Of Guarantee, which should be consulted if it becomes necessary to ship your typewriter to one of our District Offices.

IMPORTANT-PLEASE READ CAREFULLY

ROYAL is the World's Number One Portable Typewriter. If your machine should re-

quire service, you can bring or send it to the nearest of Royal McBee Corporation's

PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW FOR PACKING THE MACHINE.

- 1. Lock the automatic carriage lock. Move the carriage to the extreme right, depress the carriage locking lever, and move the carriage back to the left until it stops. This will center your carriage and lock it into position.
- 2. Place the machine in its carrying case and lock the left and right clamps securely.
- 3. If your Royal portable came encased in the white polystyrene packing, replace this on the sides of the machine—or place sufficient tissue or newspaper along both sides and in back of the machine and especially on top to protect the machine from damage while in transit.
- 4. Place the machine in its original factory carton or one suitable, using the original fillers or newspapers to prevent the typewriter from tumbling loosely in the carton.
- 5. Please ship the typewriter by insured parcel post or insured Railway Express.

Royal McBee Corporation has a policy of continuous improvements on its products and reserves the right to change materials and specifications without notice

A NEW KIND OF PORTABLE TYPEWRITER WITH PERSONALIZED TOUCH CONTROL

HERITAGE De Luxe



PRODUCT OF ROYAL McBEE CORPORATION WESTCHESTER AVENUE PORT CHESTER, N. Y.



PRODUCT OF ROYAL McBEE CORPORATION WESTCHESTER AVENUE PORT CHESTER, N.Y.